

SUPER SKYRIDER


Models S-16 SX-16



the hallcrafters co.
26II INDIANA AVENUE
CHICAGO

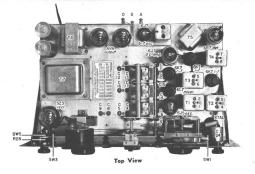

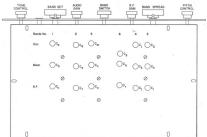

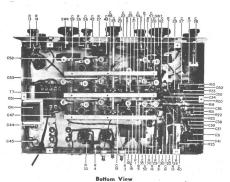

ALIGNMENT PROCEDURE FOR SUPER-SKYRIDER MODELS S-16, SX-16

THE FOLLOWING MEASUREMENTS MADE WITH 1000 OHMS PER VOLT METER AND TAKEN FROM THE POINT INDICATED TO GROUND. ANTENNA AND GROUND DISCONNECTED AND R. F. AND A. F. GAIN CONTROLS SET AT MAXIMUM. LINE VOLTAGE OF 115 AT TIME MEASUREMENTS WERE TAKEN. NORMAL TOLERANCE ALLOWS VARIATION PLUS OR MINUM 10% FROM VALUES INDICATED. "DL" INDICATES DEAD LUG BUT WILL INDICATE VOLTAGE WHEN USED AS A TIE.



BOTTOM VIEW OF SOCKET

TUBE	FUNCTION		2	3	4	5	6	7	8
6K7	R.F. AMP.			275	110	7	0 ON 60 OFF	6.3	7
6L7	MIXER			275	100	0	DL	6.3	2.5
6J5G	Osc			180	DL	0	DL	6.3	0
6K7	IF AMP (1)			270	110	6.5	DL 140	6.3	9
6K7	IF AMP (2)			270	110	6.5	0 ON 60 OFF	6.3	9
6R7G	2ND DET.			190	4.5	4.5	0	6.3	-7
6V6G	IST AUDIO			315	275	0	DL	6.3	14.5
6V6G	OUTPUT			315	275	0	DL	6.3	14.5
6J7	BEAT OSC.			150	150	0	300	6.3	0
6J7G	SIG. AMP.	- 2		275	110	5	300	6.3	8

INTERMEDIATE FREQUENCY ALIGNMENT (465KC)

HAVE THE CONTROLS SET IN THE FOLLOWING POSITIONS:

B.F.O. INJECTOR "OFF"
A.F. AND R.F. GAIN CONTROLS ON FULL.
SELECTIVITY SWITCH ON "SHARP" POSITION.
CRYSTAL PHABING CONDENSER MIDWAY (POINTER STRAIGHT UP).
A.V.C. SWITCH "OFF".
CRYSTAL SWITCH "IN".

(IF ALIGNMENT CONTINUED)

BAND SWITCH ON #1 BAND - TUNING GANG OPEN.

REMOVE OSCILLATOR TUBE.

REMOVE 6L7 GRID CAP.

CONNECT SIGNAL GENERATOR TO GRID OF 6L7 TUBE THROUGH A .1 MFD

CONDENSER. TUNE SIGNAL GENERATOR TO 465 KC AND THEN ADJUST THE

FOLLOWING TRIMMERS FOR MAXIMUM OUTPUT: T4-#7,8; T3-#5,6; T2-#3,4;

T1-#1,2; THROW CRYSTAL SWITCH TO "OUT" POSITION AND READJUST

TRIMMERS # 2, 3 FOR MAXIMUM OUTPUT: WHEN THE "SELECTIVITY" SWITCH

IS SNAPPED INTO THE "BROAD" POSITION A SLIGHT DROP IN GAIN SHOULD

BE INDICATED. A RECTIFIER TYPE METER IS SUGGESTED AS OUTPUT INDICATOR.

ALIGNMENT USING 465 KC CRYSTAL

Should the receiver be a crystal model it is necessary that the crystal be used in an external oscillator in place of a signal generator such as the above. The output of this crystal controlled oscillator is then fed to the grid of the 6L7 tube and the above procedure followed. When the IF amplifier has been aligned from the crystal oscillator's output, re-inserting the crystal in the receiver will show very little difference in output whether the crystal is "IN" or "Out" of the circuit as indicated by the crystal switch.

R. F. ALIGNMENT PROCEDURE

ON BAND #1, OR BROADCAST, USE A .0002 MFD CONDENSER IN SERIES WITH OUTPUT LEAD FROM GENERATOR TO RECEIVER. ON THE OTHER BANDS USE A 400 OHM RESISTOR. BE SURE JUMPER FROM DOUBLET POST TO GND. REMAINS CONNECTED WHEN ALIGNING THE RECEIVER.
ALL PAD ADJUSTMENTS (LOCATED ON THE TOP OF THE CHASSIS) ARE FOR THE LOW FREQUENCY ENDS OF THE BANDS.
ALL TRIMMER ADJUSTMENTS (LOCATED ON THE BOTTOM OF THE CHASSIS) ARE FOR THE HIGH FREQUENCY ENDS OF THE BANDS.
REDUCE R.F. GAIN CONTROL BELOW THE POINT OF BLOCKING OR OVERLOADING;
ALSO BE SURE THAT THE CRYSTAL SWITCH IS IN THE "OUT" POSITION AND THE A.V.C. SWITCH IS IN THE "OFF" POSITION.

BE SURE TO CHECK IMAGES — IMAGES WILL FALL A LITTLE LESS THAN 1000 KC LOWER IN FREQUENCY THAN THE FUNDAMENTAL OR HARMONIC OF SIGNAL.

THE TUNING GANG MUST BE ROCKED WHEN MAKING THESE ADJUSTMENTS.

Note #1 HARMONICS OF SUITABLE FREQUENCIES MAY BE USED IF THE FOLLOWING FREQUENCIES SUGGESTED ARE NOT AVAILABLE.

#2 IT IS NECESSARY TO REPEAT EACH PAIR OF OPERATIONS SEVERAL TIMES UNTIL NO CHANGE IS NOTED.

Opr.	BAND	RECEIVER DIAL SETTING	SIGNAL GENERATOR FREQUENCY		TRIMMERS ADJ. FOR MAX GAIN	ADJUST OSC. WITH	PADDERS ADJ. FOR MAX GAIN
1 2	1	600kc 1400kc	600κ c 1400κ c	CA	Св — Сс	C9	
3 4	2 2	1800kc 4000kc	1800kc 4000kc	CD	CE - CF	C8	
5 6	3	5000kc 9000kc	5000kc 9000kc	CG	CH - CI	C6	C14 - C10
7 8	4 4	10,000kc	10,000kc	CJ	CK - CL	C7	C15 - C11
9	5	20,000kc 30,000kc	10,000KC	См	CN - Co	C5	C16 - C12
11	6	40,000kc 60,000kc	20,000kc 20,000kc	СР	CQ - CR	C4	C17 - C13

SERVICING SUGGESTIONS

TO MAKE A RAPID CHECK OF THE RECEIVER REMOVEGRID CAP OF THE 6RT TUBE AND TOUCH THE GRID OF THE TUBE WITH YOUR FINGER. IF A LOUD HUM IS HEARD THE AUDIO END OF THE RECEIVER IS OK.

DEAD SET. CHECK BIAS OF THE R.F. TUBES. IF THE BIAS IS TOO HIGH CHECK THE R.F. GAIN CONTROL FOR AN OPEN. ADDITIONALLY, CHECK THE PLATE AND SCREEN VOLTAGE OF THE R.F. TUBES - (SEE CHART). CHECK "BPLUS" FOR A SHORT TO GROUND - IF SO CHECK ALL TUBES.

IF THE RECEIVER DEVELOPS A HIGH-PITCH AUDIO SQUEAL REVERSE THE GRID WIRES OF THE AUDIO INPUT TRANSFORMER.

NOISY GANG WHEN JARRED - INCREASE THE TENSION ON THE GANG WIPERS.

Noisy coll assembly - Lightly tap the trimmers of the Particular Band in which noise occurs. Once located the trimmer should be replaced.

IF LOW SIGNAL AND HIGH NOISE LEVEL DEVELOPS REPLACE THE 6L7 TUBE.

DEAD BEAT OSCILLATOR - IF 6J7 SHOULD SHORT TO GROUND IT WILL OPEN THE BO CONTROL. CHECK #I - "BPLUS" TO BO COIL FOR A GROUND. CHECK #2 - CHECK THE BO INJECTION CONTROL FOR AN OPEN CIRCUIT. HN MOST CASES A NEW 6J7 WILL CORRECT A DEAD BO.

VIOLENT OSCILLATION - CHECK ALL 6K7 TUBES. ALSO IF A 300 OHM BIAS RESISTOR IS USED ON THE LAST 6K7 IF AMPLIFIER REPLACE WITH A 400 OHM RESISTOR.

LIST OF RESISTORS SUPER-SKYRIDER MODELS S-16, SX16

	PARTS NO.	20-093	20-108	20-033	20-108	20-02	20-099	20-099	22-032	25-023	20-072	25-013	20-063	25-022	25-007	22-015	20-033	
	WATTAGE	1/5	E	E	E	E	E	ŧ	E		F		=		1/2		1/2	
	OHMS	100,000	000,000	000	000,000	20,000	100,000	100,000	950	000,000	20,000	000,000	10,000	200	95	235	1.000	
	No.	R 18	R 19	R20	R21	R22	R23	R24	R25	R26	R27	R28	R29	R30	R3 1	R32	R33	7
	PARTS No.	20-093	25-021	24-037	24-037	24-038	20-084	20-061	20-093	22-020	22-075	20-084	20-084	20-084	25-024	20-093	22-021	20-093
1	WATTAGE	1/5		2.5	E	1/5	E	_•	1/2	E	_•	1/5	±	=		E		E
	Онмв	100,000	5,000	10,000	10,000	100	50,000	10,000	100,000	285	29,000	20,000	20,000	50,000	200,000	100,000	380	100,000
	No.	R	22	83	R4	RS	R6	R7	R8	R9	R 0	<u>~</u>	R 2	R 3	R 14	R15	R16	R17

SUPER-SKYRIDER Models S-16, SX-16 LIST OF CONDENSERS

No.	CAPA	CAPACITY	TYPE	VOLTAGE	PARTS No.	No.	CAPACITY	TY	TYPE	VOLTAGE	PARTS NO.
-	420	MMFD	MAIN			C32	_	MFD		400	41-001
5 6	420	1			48-017	633		MFD		400	41-001
3		=	GANG			34		=		400	4 1-005
2		E			44-019	C35	•05	=		200	41-004
2		E				036	-	=		400	41-007
9 9	310	H.			44-020	C37	.05	E		200	41-004
25						C38		MMFD	MICA		40-004
5 6	-	E			44-018	633	001	=	E		40-007
3 5	2000	t				040	0	MFD	ELEC	25	42-005
200	_	=			44-017	C4-	.0005	=	MICA		43-008
3 -	-	=				C45	.005	=		009	45-003
2					44-016	C43	.02			400	41-003
3 0		=				C44	91	E	ELEC	400	42-019
2 4	-	ŧ			44-017	C45	91	E	=	400	42-019
- 4	•	ŧ				C46	_	£		400	41-013
2 0		ŧ			44-016	C47	10.	E		400	41-001
3 6		E				C48	_	MMFD	MICA		40-005
200			MICA		40-013	649	250	E	2		40-007
0 0		=		200	41-004	020	•05	MFD		400	41-005
000		=		400	41-007	C51	_	MMFD	=		40-021
200		=	=		40-013	C52	2	ŧ	E		40-021
000		MMFD	=		40-003	C53	2	£	=		40-021
53				200	41-004	C54	0	£	=		40-021
C24		2	AIR		48-021	C55	20	=	=		40-002
COS			MICA		40-013	029	0	E	=		40-021
C26	.05			200	41-004	557	0	=	= :		40-021
C27		ŧ		400	41-005	C58	0	= :	= :		40-021
C28		MMFD	AIR		48-012	C29	25	=	E		40-024
623				200	41-004	090	• 02	MFD		200	41-004
030		E		200	41-008	190	.05	= 1		200	41-004
23		MMFD	MICA		40-021	C62	.002	=	E		40-01
3						. 663	.002	E	E		40-013
S	CRYSTAL		SWITCH SPST								
82	BEAT	080	SWITCH	ON B.	F. O. INJEC	LION	INJECTION CONTROL				
83	A. V.	ڻ.	SWITCH	DPST							
84	SEND	α									
82	A.			TONE	CONTROL						
900	METER	R SWITCH	TCH ON K.		TOWN CONTRACT						
2.5	SELE	SELECTIVITY									